
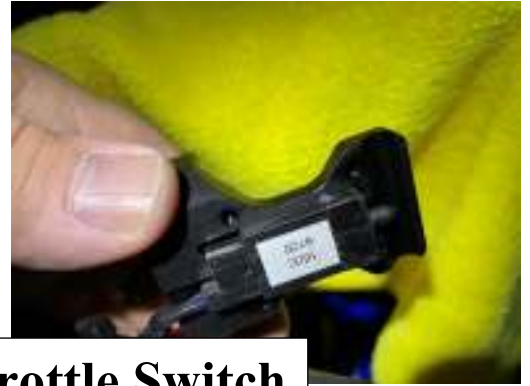


# AirPro Polaris Throttle Block

#PST-101

Step 1: Once you have your OEM throttle block removed from the snowmobile, disassemble the piece to remove the throttle switch. Remove the aluminum cover on the AirPro throttle block and place the throttle switch into the groove and position the switch as shown to the right. Install cover and 4 screws. Size of hex key needed is 7/64".

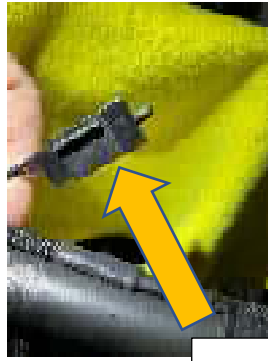

**Throttle Switch**



**NOTE:**

**Do not overtighten the throttle block.**

Step 2: Install the AirPro throttle block on the machine and assemble the rest as you would the OEM. Size of hex key for the next two bolts installed is 5/32".

When reassembling the throttle block. Please make sure to use the same number of washers on the retaining pin that was on the OEM. Before starting the snowmobile, please test the throttle to ensure it has enough play to go back to the off position. We have included one extra C and E clip for your convenience.

**\*We recommend having your Polaris dealer install your new Airpro Throttle Block \***